

Summary

.Base function: Outdoor Wall light


.Using place : outdoor wall

| .Techinal | parameter: |
|-----------|------------|
| | |

| . reonina parameter. | | | | | | | |
|----------------------|------------|-----------|--------------|-------|-------|-------|----|
| Model no | Voltage | Frequency | Product Size | Power | LUM | CCT | IP |
| DUVA 9718.12.65.30 | AC220-240V | 50/60HZ | 200*80*50mm | 12W | 800lm | 3000K | 65 |

Product Image and dimension



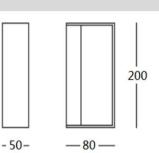

Warning using and installation in according with use of manual

.The input volatge should no exceed the rate voltage range(Rate voltage: AC220-AC240V 50/60HZ)

.The wall light can not be installed in the following palce:





Inclinded place

Unfixed wall Board


.It is not possible to install the wall light above high temperature object. .The wall light is not dimmed and cant not be used with dimmer .Inspection and repair , pls entrust a professional to operate. .When the wall light fails, pls cut off power quickly and link with manufacture.

Installation

.Take out the product from the inner box.

.Disassemble the light and fix the light base on the wall by 2pcs screws from accessories bag

Link the power line in the connector, if connection is wrong, it is easy to casue fire, so firstconnect the GND before connect power line.

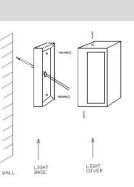

. Install the light cover on the light base by the 2pcs screws.