



Installation:


Method A: Suspending

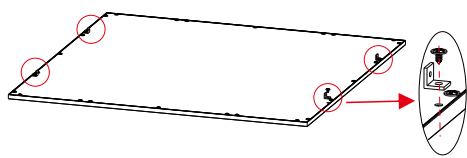


1. 4 pcs Type L bracket fixed on back of panel

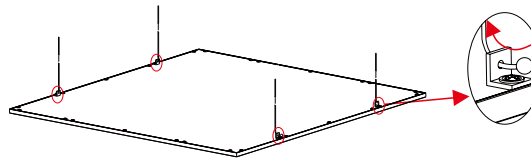

2. Put steel wire rope into bracket, fixed with panel light

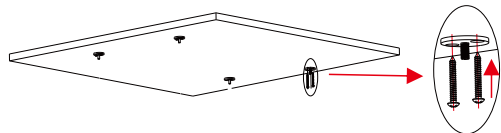


3. Fix flat washer on ceiling

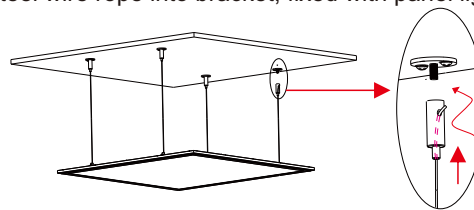


4. Steel wire rope through locker, then locker fixed with flat washer


Method B: Recessed

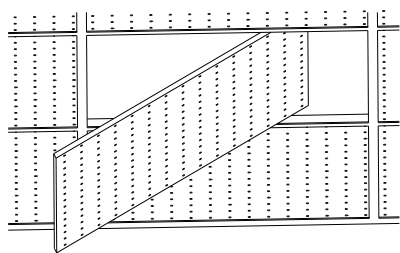


1. Take off the ceiling

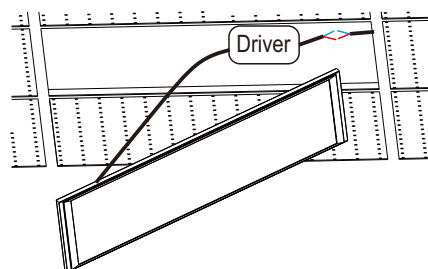

2. Driver connected with home wire

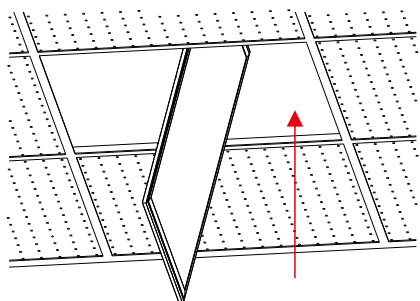


3. Push panel into ceiling

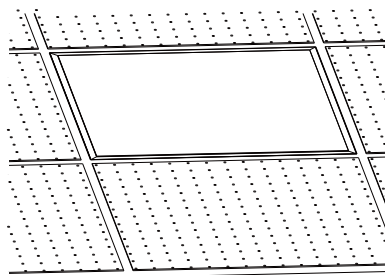


4. Flat the panel, panel frame fixed on ceiling frame


Method C: Ceiling

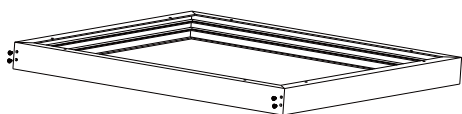


1. 4 pcs aluminum bar connected by screws

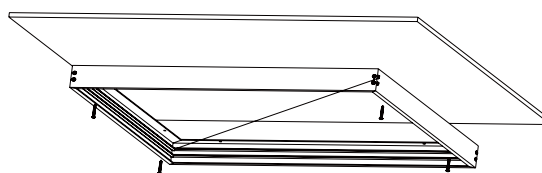

2. fix the frame with ceiling

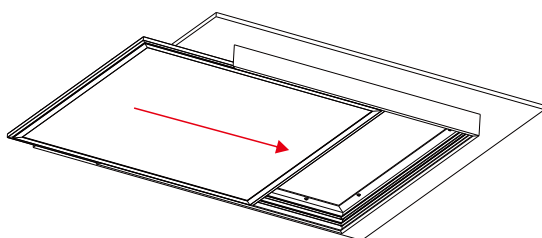

3. remove 1 pc aluminum bar and push panel in

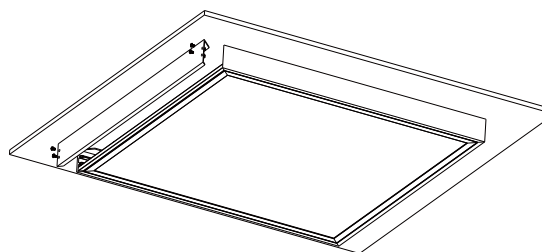

4. Fix last aluminum bar and finished installation